

What the Camera Mount does:

When the Camera Mount is placed correctly on the pylon, it will with the help of the channel be guided by the rope and follow the skier.

Please note that the Camera Mount comes in different 3 models to fit newer Ski Nautiques, Malibu or MasterCraft boats. Make sure to only use the appropriate mount for the boat being used! Check inside the Camera Mount towards the top for the serial number. The first two letters indicate the model type. SN - Ski Nautique, MB - Malibu and MC - MasterCraft.

Cameras:

The Camera Mount is designed for smaller compact cameras. It has been tested on cameras of a weight up to 7oz./200 grams. Cell phones can be used with an adapter. These can be purchased inexpensively on-line at sites like EBAY - search for "cell phone tripod".


The mount is equipped with a vibration damper. This reduces the amount of vibration from the boat, especially wavy video. We have had very good results with Kodak PlaySport zx5. Unfortunately, you may not be able to achieve good results with some cameras.

Important:

Do not pull, push, squeeze, lift on the black top, with or without a camera attached!

Do not leave the Camera Mount exposed to the sun for an extended period of time.


Avoid letting the Camera Mount get wet.

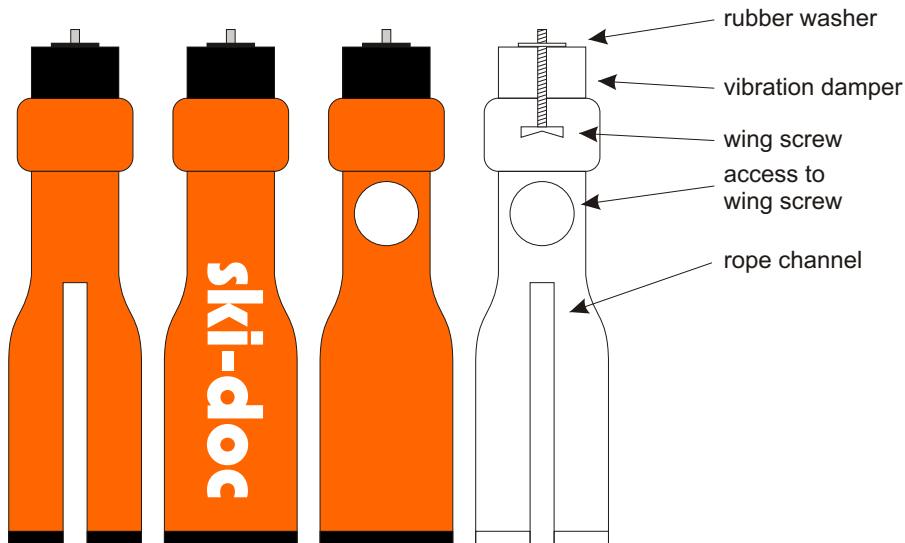

How to attach the rope:

Attach the ski rope as usual and slide the Camera Mount on to the pylon until it stops, with the rope going through one or both of the channel. When shortening the rope pull the Mount up and put it on the floor or the seat. If possible double loop the rope, so the previous rope shortening goes through the channel pointed towards the front of the boat and the new towards the back.

Always double check that you have attached the rope correctly on the pylon!

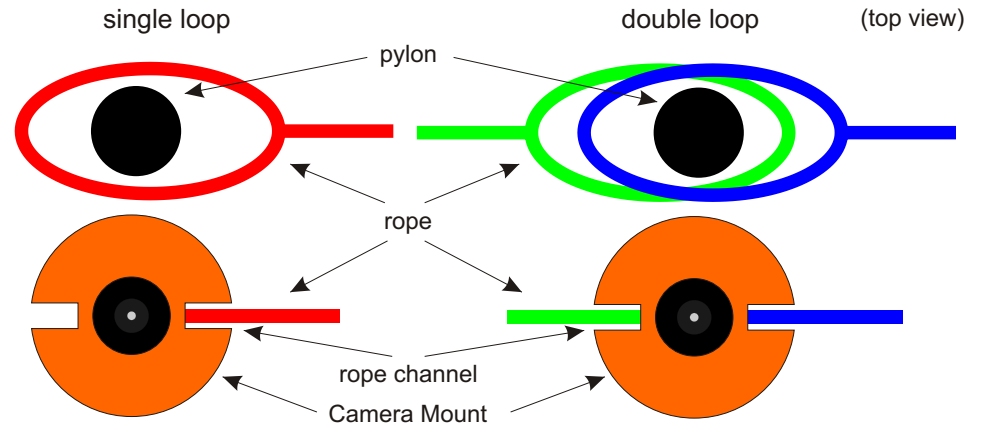

Disclaimer:

There is always a risk of damage to your camera when you bring it on a boat. Using this Camera Mount is no exception. In case of rope recoil, the rope or handle can hit or get wrapped around the camera and damage it. The Camera Mount is placed on top of the Pylon and is held in place by gravity, so there is always a risk that the Camera Mount and Camera can fall off causing damage to the camera or cause personal injury. Always make sure the camera and Camera Mount is correctly attached! Always use common sense and frequently check the Camera Mount for damage that might harm the rope, pylon or camera. Do not lean on the Camera Mount - Do not use the Camera Mount for anything else than a pylon Camera Mount. Please use precaution, we cannot be held responsible to damage to property, persons or equipment.

